


## Wireless Telephone Quick Reference Guide Avaya MERLIN LEGEND/MAGIX PBX

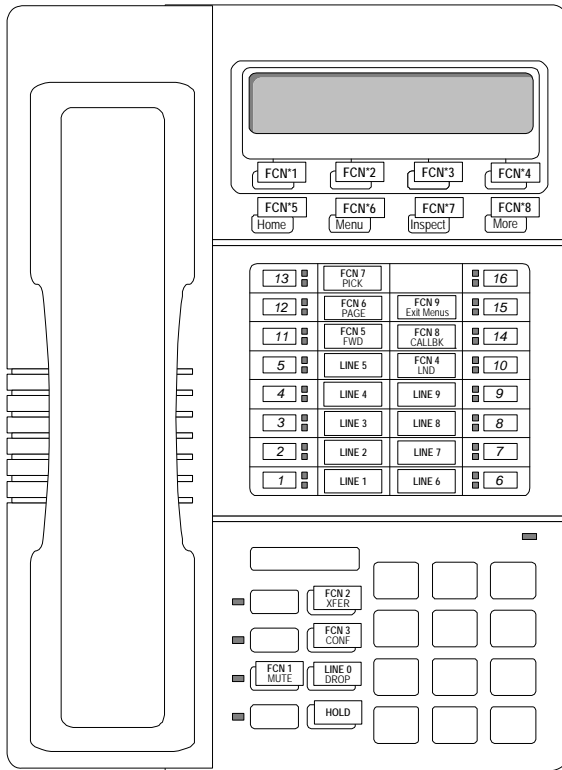


### MLX16DP

Pressing **LINE** followed by a digit (1-7) on the Wireless Telephone is equivalent to pressing one of the line keys on the MLX16DP.

**FCN** followed by a digit (1-9) on the Wireless Telephone is equivalent to using feature buttons on the station set.

**FCN** followed by \* and a digit (1-8) allows you to access the eight programmable soft keys under the station set display.

Function Key Strokes	Default Settings	Fill In Your Feature Settings
FCN + 1	MUTE	
FCN + 2	XFER	
FCN + 3	CONF	
FCN + 4	LND	
FCN + 5	FWD	
FCN + 6	PAGE	
FCN + 7	PICK	
FCN + 8	CALLBK	
FCN + 9	EXIT MENUS	
FCN * 1		
FCN * 2		
FCN * 3		
FCN * 4		
FCN * 5		
FCN * 6		
FCN * 7		
FCN * 8		
LINE + 0	DROP	

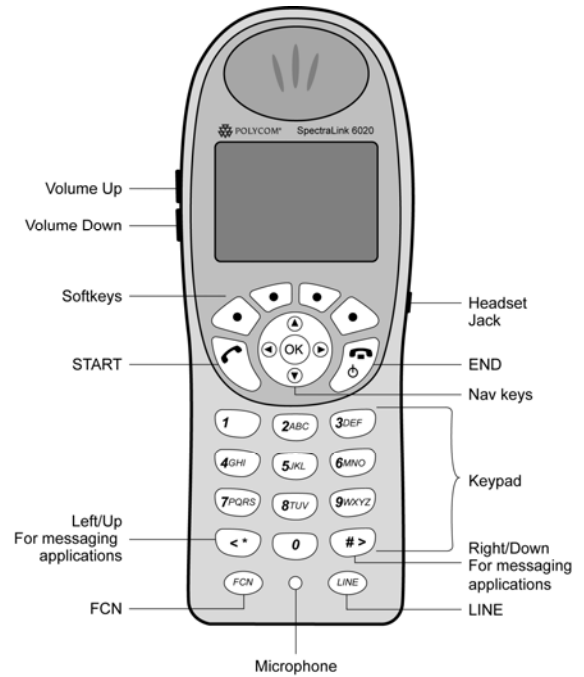

### SpectraLink 6020 Wireless Telephone

- On/Off** Press and hold **END**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Mute On/Off** Press the **MUTE** softkey.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press the **CFG** softkey while on hook to change handset settings.

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.



For technical support, please contact your facility's Network Administrator.