

## Accessing the Function Menu

Press **FCN** followed by a digit (**1-9, \*, 0, and #**) while off-hook to access the feature options programmed for your Wireless Telephone template.

When you are on a call, your Wireless Telephone display will show a solid number indicating which line you are currently using. If a second call comes in on another line, a flashing second number will appear to indicate which line is ringing. If a second call comes in on the same line, the line number will begin flashing. You can answer the call by re-selecting the line. You can switch between calls by repeatedly reselecting the line.


If two or three line appearances have been assigned to your feature template, you can access them by pressing **LINE** followed by either **1, 2** or **3** on the Wireless Telephone.

The Wireless Telephone has two volume levels, low and high. You can set your low volume level by pressing **FCN** while your Wireless Telephone is on-hook, and selecting a volume **1** through **8**. While you are talking on the Wireless Telephone, press **VOL** once to switch your volume level from low to high and vice versa. The Wireless Telephone will reset to the low volume when powered off.

Press **FCN** followed by a digit (1-9, \*, 0, and #) while off-hook to access the feature options programmed in your Wireless Telephone template.

| Function Key Strokes | Fill In Your Feature Settings |
|----------------------|-------------------------------|
| FCN + 1              |                               |
| FCN + 2              |                               |
| FCN + 3              |                               |
| FCN + 4              |                               |
| FCN + 5              |                               |
| FCN + 6              |                               |
| FCN + 7              |                               |
| FCN + 8              |                               |
| FCN + 9              |                               |
| FCN + *              |                               |
| FCN + 0              |                               |
| FCN + #              |                               |

For information on Battery Pack charging and setting user preferences, see the Wireless Telephone User Guide.

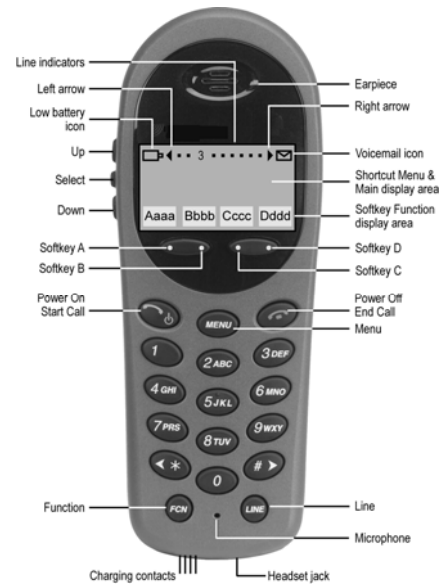

### NetLink e340 Wireless Telephone

- On/Off** Press and hold **PWR**. Two chirps on, one chirp off
- Make a call** Press **START** to get dial tone.
- Hang up** Press **END**. Be sure to do this at the end of each call.
- Answer call** Press **START**. Line indicator comes on steady when the call is answered.
- Answer second call** Press **HOLD** to put your current call on hold, or **END** to hang up. Press **LINE** + the digit that is flashing.
- Hold** Press **HOLD**
- Take off Hold** Press **LINE** followed by the digit for the line on hold, which will be flashing.
- Function** Pressing **FCN** while off hook allows you to scroll through menu screens.
- User Options** Press **FCN** while on hook to change handset settings.
- Adjust Volume** Press **VOL** while in a call to toggle between base and louder level

#### Status/Tone Indicators

- NO SVC Alarm / Restore** An alarm sounds when the Wireless Telephone cannot receive or place calls. You may be outside of the coverage area. Walk back into the covered area. A restore tone indicates service is re-established.
- BATT Beep** Your Battery Pack charge is low. Your Battery Pack needs to be recharged or replaced.
- MSG** You have a voice mail message.
- AutAns FwdAll** Displays when the Wireless Telephone is powered on but not in use to indicate that the feature is enabled.



Please contact your facility's Network Administrator for support.