


# Polycom® EagleEye™ Director II Camera System Quick Tips

3725-69436-001A | June 2017


The Polycom® EagleEye™ Director II camera system is the next version of the Polycom EagleEye Director camera system.

This automatic camera positioning system provides accurate close-up views of the person speaking. The EagleEye Director II camera system also provides smooth transitions between the close speaker and the group view.

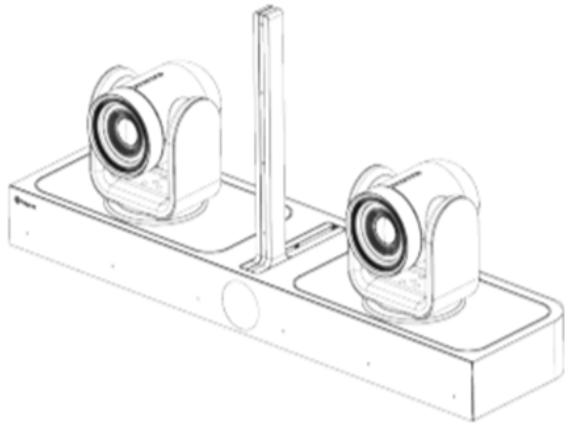

## Indicator Lights

Indicator lights display when the EagleEye Director II camera system is powered on.

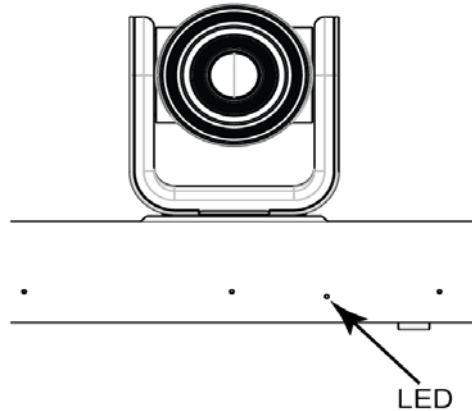



Number	Description
Blue	Power on, EagleEye Director II camera system is in active state
Blinking Blue	Receive IR, EagleEye Director II camera system boot up
Fast Blinking Blue	Power on, System is being initialized, Adjust Analytics camera status
Amber	Standby/Asleep
Alternate Amber and Blue	Software update, factory restore, USB image update
Blinking Amber	USB plugged in
Green	In a call

Number	Description
Blinking Green	Receive IR in a call
Fast Blinking Red	Camera system error

## Disable Camera Tracking

Disable camera tracking to stop the camera from automatically tracking the people who are speaking.

You can disable camera tracking for a call using the remote control.

- » Press  or  on the remote control to disable camera tracking.





 

After you disable camera tracking, you can manually control the camera position using the remote control.

## Adjust the Camera

You can make adjustments to Polycom cameras to enhance the view of meeting participants using the remote control with the Polycom EagleEye Director II camera system.




**Note:** Before you adjust the EagleEye Director II camera system, you must disable camera tracking.

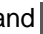- » Press      and  on the remote control to pan, tilt and zoom the left EagleEye IV camera.



## Enable Camera Tracking

Enable camera tracking to allow the EagleEye Director II camera system to automatically focus on the people who are speaking. The EagleEye Director II camera system automatically tracks when a call is started.


You can manually start camera tracking while in a call or out of call.

- 1 Press  for five seconds on the remote control.

The LED indicator on the camera system flashes blue.


- 2 Press  or  on the remote control to enable camera tracking.

## Set Video Input as EagleEye Director II Camera



- 1 In Skype for Business client, click  > **Video Device**.
- 2 Select **Polycom EagleEye Director II Camera** from the list.
- 3 Click **OK**.



## Tilt Analytics Camera

Tilting the analytics camera to an appropriate position is important to view and track the participants.

- 1 Press  for five seconds on the remote control.

The LED indicator on the camera system flashes blue.

- 2 Press  and  on the remote control to tilt the analytics camera.

Do not press any button on the remote control for five seconds or press  or  to quit from tilting the analytics camera.