


Poly Controller

Use the Poly Controller with your Poly Trio 8500 and 8800 systems to control your Poly G7500, Poly Studio X50, and Poly Studio X30 in Poly Video mode. The Controller lets you operate the connected system through a touch screen. The table below describes each button's function.

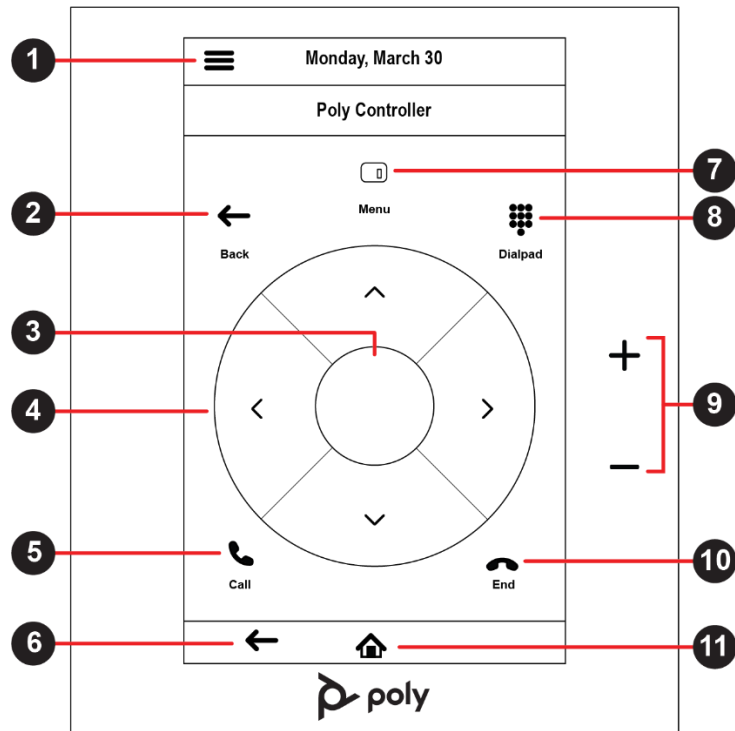

Button Reference	Button Name	Description
1	Trio Settings	Opens the Trio settings menu.
2	Back	Returns to the connected system's display menu.
3	Select	Selects a field of displayed data.
4	Navigation Keys	Navigate through information or options on the connected system's display.
5	Call	Calls the entered number.
6	Previous	Returns to the previous Trio settings menu.
7	Menu	Opens the connected system's menu.
8	Dialpad	Opens the system display and Trio dialpad.
9	Volume keys	Controls the device volume or controls the camera zoom in and out.
10	End	Ends the active call.
11	Home	Returns to the Trio controller Home screen.