


## Poly Controller on Poly Trio Systems

The Poly Controller enables you to operate Poly G7500, Poly Studio X50, or Poly Studio X30 systems using your Poly Trio touchscreen. The Poly Controller is available for Poly Video mode on Trio 8500, Trio 8800, and Trio C60 systems.

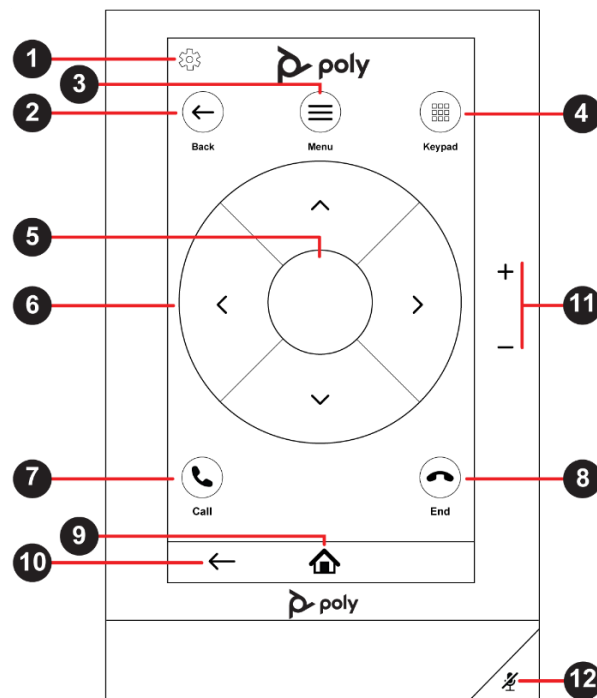

Reference Number	Button Name	Description
1	Settings	Opens the Trio settings menu.
2	Back	Returns to the connected system's display menu.
3	Menu	Opens the connected system's menu.
4	Keypad	Opens the system display and the Trio dialpad.
5	Select	Selects a field of displayed data.
6	Navigation keys	Navigates through information and menus on the connected system's display.
7	Call	Calls the entered number.
8	End	Ends the active call.
9	Home	Returns to the Trio controller's <b>Home</b> screen.
10	Previous	Returns to the previous Trio settings menu.
11	Volume keys	Controls the device volume or controls the camera zoom in and out.
12	Mute	Mutes the microphones during calls.