



**GETTING STARTED GUIDE**

Version 4.1 | April 2015 | 3725-78702-001E1

# **Polycom<sup>®</sup> RealPresence<sup>®</sup> Access Director<sup>™</sup> System**



---

Copyright© 2012-2015, Polycom, Inc. All rights reserved. No part of this document may be reproduced, translated into another language or format, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc.

6001 America Center Drive  
San Jose, CA 95002  
USA

**Trademarks** Polycom®, the Polycom logo and the names and marks associated with Polycom products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries.



All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom.



Java is a registered trademark of Oracle America, Inc., and/or its affiliates.

**Disclaimer** While Polycom uses reasonable efforts to include accurate and up-to-date information in this document, Polycom makes no warranties or representations as to its accuracy. Polycom assumes no liability or responsibility for any typographical or other errors or omissions in the content of this document.

**Limitation of Liability** Polycom and/or its respective suppliers make no representations about the suitability of the information contained in this document for any purpose. Information is provided "as is" without warranty of any kind and is subject to change without notice. The entire risk arising out of its use remains with the recipient. In no event shall Polycom and/or its respective suppliers be liable for any direct, consequential, incidental, special, punitive or other damages whatsoever (including without limitation, damages for loss of business profits, business interruption, or loss of business information), even if Polycom has been advised of the possibility of such damages.

**End User License Agreement** By installing, copying, or otherwise using this product, you acknowledge that you have read, understand and agree to be bound by the terms and conditions of the End User License Agreement for this product. The EULA for this product is available on the Polycom Support page for the product.

**Patent Information** The accompanying product may be protected by one or more U.S. and foreign patents and/or pending patent applications held by Polycom, Inc.

**Open Source Software Used in this Product** This product may contain open source software. You may receive the open source software from Polycom up to three (3) years after the distribution date of the applicable product or software at a charge not greater than the cost to Polycom of shipping or distributing the software to you. To receive software information, as well as the open source software code used in this product, contact Polycom by email at [OpenSourceVideo@polycom.com](mailto:OpenSourceVideo@polycom.com).

**Customer Feedback** We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to [DocumentationFeedback@polycom.com](mailto:DocumentationFeedback@polycom.com).

**Polycom Support** Visit the [Polycom Support Center](#) for End User License Agreements, software downloads, product documents, product licenses, troubleshooting tips, service requests, and more.

---

# Contents

<b>Conventions Used in Polycom Guides</b> .....	<b>5</b>
Information Elements .....	5
Typographic Conventions .....	6
<b>About This Guide</b> .....	<b>7</b>
Required Skills .....	7
Related Documentation .....	7
Get Help .....	8
The Polycom Community .....	8
<b>Preparation for System Installation</b> .....	<b>9</b>
Complete the First-Time Setup Worksheet .....	9
Prepare a Client System .....	10
Install the RealPresence Platform Director System (Virtual Edition Only) .....	10
<b>System Installation</b> .....	<b>11</b>
Virtual Edition Installation .....	11
Install the RealPresence Access Director System Software Using Your Virtual Environment Tools .....	11
Assign a Static IP Address .....	11
Install the RealPresence Access Director System Software Using the RealPresence Platform Director System .....	12
Appliance Edition Installation .....	13
Unpack and Install the Hardware .....	13
Contents of Shipment .....	14
System Software Installation .....	15
Install the System Software Using the USB Configuration Utility and DVD .....	15
Install the System Software Using the DVD .....	16
<b>System Configuration</b> .....	<b>18</b>
Log in to the RealPresence Access Director System Web User Interface .....	18
Add a New Administrator Account .....	19

---

Delete the Default Administrator Account .....	19
Configure Initial Network Settings–Virtual Edition .....	20
Configure Initial Network Settings–Appliance Edition .....	21
Additional Configuration .....	22








# Conventions Used in Polycom Guides

Polycom guides contains terms, graphical elements, and a few typographic conventions. Familiarizing yourself with these terms, elements, and conventions will help you successfully perform tasks.

## Information Elements

This guide may include any of the following icons to alert you to important information.

### Icons Used in this Guide

Name	Icon	Description
Note		The Note icon highlights information of interest or important information needed to be successful in accomplishing a procedure or to understand a concept.
Caution		The Caution icon highlights information you need to know to avoid a hazard that could potentially impact device performance, application functionality, or successful feature configuration.
Warning		The Warning icon highlights an action you must perform (or avoid) to prevent issues that may cause you to lose information or your configuration setup, and/or affect phone, video, or network performance.
Web Info		The Web Info icon highlights supplementary information available online such as documents or downloads on support.polycom.com or other locations.
Administrator Tip		The Administrator Tip icon highlights techniques, shortcuts, or productivity related tips.
User Tip		The User Tip icon highlights techniques, shortcuts, or productivity related tips.
Troubleshooting		The Troubleshooting icon highlights information that may help you solve a relevant problem or to refer you to other relevant troubleshooting resources.

---

# Typographic Conventions

A few typographic conventions, listed next, may be used in this guide to distinguish types of in-text information.

## Typographic Conventions

Convention	Description
<b>Bold</b>	Highlights interface items such as menus, menu selections, window and dialog names, soft keys, file names, and directory names when they are involved in a procedure or user action. Also used to highlight text to be entered or typed.
<i>Italics</i>	Used to emphasize text, to show example values or inputs (in this form: <example>), and to show titles of reference documents available from the Polycom Support Web site and other reference sites.
<a href="#">Blue Text</a>	Used for cross references to other sections within this document and for hyperlinks to external sites and documents.
<code>Courier</code>	Used for code fragments and parameter names.

# About This Guide

---

This guide provides the information you need to install and configure the initial settings for a Polycom® RealPresence Access Director™ system, Appliance Edition and Virtual Edition. Once you have installed and initially configured your system, see the *Polycom RealPresence Access Director System Administrator Guide* and the *Polycom Unified Communications in RealPresence Access Director System Environments* for additional configuration and customization tasks you can perform.

## Required Skills

This document is written for a technical audience. As a system administrator of the RealPresence Access Director system, you should understand the following:

- Basic computer and network system administration
- Physical installation and cabling of servers
- Network configuration, including IP addressing, subnets, gateways, domains, DNS, time servers, and possibly network routing rules
- Firewalls and network security
- The deployment model for the RealPresence Access Director system being installed and the video conferencing/collaboration network of which it will be a part

If necessary, obtain the assistance of the appropriate IT or network administration personnel before proceeding.

## Related Documentation

Please read all available documentation before you install or operate the system. Documents are available at <http://support.polycom.com>.

- *Polycom RealPresence Access Director System Release Notes*
- *Polycom RealPresence Access Director System Administrator Guide*
- *Polycom Unified Communications in RealPresence Access Director System Environments*



**Note: Access Online Help from the Web-based User Interface**

For help within the RealPresence Access Director system user interface, after installing the system and logging in, select **Help > Help Contents** to access all online help.

## Get Help

For more information about installing, configuring, and administering Polycom products, refer to **Documents and Downloads** at [Polycom Support](#).

## The Polycom Community

The [Polycom Community](#) gives you access to the latest developer and support information. Participate in discussion forums to share ideas and solve problems with your colleagues. To register with the Polycom Community, simply create a Polycom online account. When logged in, you can access Polycom support personnel and participate in developer and support forums to find the latest information on hardware, software, and partner solutions topics.



# Preparation for System Installation

Before you install and configure your Polycom® RealPresence® Access Director™ system, complete the following preparation tasks:

- [Complete the First-Time Setup Worksheet](#)
- [Prepare a Client System](#)
- [Install the RealPresence Platform Director System \(Virtual Edition Only\)](#)

## Complete the First-Time Setup Worksheet

Before you begin installation and initial configuration of your system, fill out the **Value** column of the First-Time Setup Worksheet with the specific settings for your system.

### First-Time Setup Worksheet

System Information	Description	Value
Hostname	The hostname of your system. Hostname must begin with a letter and contain only letters, numbers, and internal hyphens. <b>Note:</b> If you install two system servers in a two-system tunnel configuration, assign a different hostname to each server.	
DNS Address	The IP address of the Domain Name Server for the network to which your system connects.	
Domain Name	The name of the domain in which your system operates. <Host Name>.<Domain>	
IPv4 Address	The static IP address of your RealPresence Access Director system. For initial configuration, this is the IP address for eth0. You can configure the IP addresses for eth1, eth2, and eth3 as needed after the initial configuration.	
IPv4 Subnet Mask	The subnet mask of the RealPresence Access Director system's static IP address.	
IPv4 Default Gateway	The IP address of the gateway used to route network traffic outside the subnet.	

## Prepare a Client System

You will need a client system running Microsoft® Windows® to install the RealPresence Access Director, Appliance Edition, system software by using the USB Configuration Utility and system DVD. You will also need the client system to log in to the RealPresence Access Director web user interface after you install the software or a virtual instance.

The Windows client system needs the following hardware and software:

- Hardware
  - 1280x1024 (SXGA) minimum display resolution; 1680x1050 (WSXGA+) or greater recommended
  - USB and Ethernet ports
- Software
  - Browser: Microsoft Internet Explorer® version 8 or higher, or Google Chrome™
  - Java™ version 7
  - Adobe® Flash® version 11 or higher

To install the RealPresence Access Director, Appliance Edition, system software by using only the DVD, you will also need a monitor and keyboard.

## Install the RealPresence Platform Director System (Virtual Edition Only)

The Polycom® RealPresence® Platform Director™ system is included with all Virtual Edition products and is available at Polycom's support site for download.

Virtual Editions of Polycom RealPresence Platform products such as the RealPresence Access Director system require the RealPresence Platform Director system to manage licensing.

For complete instructions on how to install and use the RealPresence Platform Director system, see the *Polycom RealPresence Platform Director System Getting Started Guide*.

# System Installation

---

The RealPresence Access Director system is available in an Appliance Edition and a Virtual Edition. Refer to the following installation instructions based on your edition.

## Virtual Edition Installation

Before you install the RealPresence Access Director system, Virtual Edition, in your virtual environment, review the *Polycom RealPresence Access Director System Release Notes* to ensure that your host machine has the capacity for your planned RealPresence Access Director, Virtual Edition, deployment.

You can use your virtual environment tools to install an instance of the RealPresence Access Director system. Additionally, if your RealPresence Platform Director system was installed in a VMware® vCenter Server® environment with the required capacity, you can use the RealPresence Platform Director system to deploy Polycom software.

- [Install the RealPresence Access Director System Software Using Your Virtual Environment Tools](#)
- [Install the RealPresence Access Director System Software Using the RealPresence Platform Director System](#)

## Install the RealPresence Access Director System Software Using Your Virtual Environment Tools

If you install the RealPresence Access Director, Virtual Edition, using your virtual environment tools, you will still need to use the RealPresence Platform Director system to manage licensing of your Polycom software.

### To install the RealPresence Access Director system using your virtual environment tools:

- 1 Refer to the documentation for your virtual environment tools for instructions on installing a virtual instance.
- 2 Install an instance of the RealPresence Access Director, Virtual Edition.
- 3 Assign a static IP address to the instance if necessary. See [Assign a Static IP Address](#).
- 4 After the installation is complete, log in to the RealPresence Access Director system's web user interface to complete your initial configuration. See [Configure Initial Network Settings–Virtual Edition](#).

### Assign a Static IP Address

When you install an instance of the RealPresence Access Director system using your virtual environment tools, if your network has a DHCP server, it will assign a temporary IP address to the instance. You must

then assign a static IP address when you log in to the RealPresence Access Director web user interface for the first time.

If your network does not have a DHCP server, you need to assign a static IP address after you install an instance.



#### **Assign only one static IP address during initial network configuration**

During installation and initial network configuration, you need to assign one static IP address to the management interface (eth0). After installation is complete, you can configure additional IP addresses for the other network interfaces from the RealPresence Access Director web user interface.

#### **To assign a static IP address:**

- 1 From the vSphere® client, select the RealPresence Access Director instance that you installed and click the **Console** tab.  
The CLI log-in screen displays.
- 2 Log in with the following credentials:
  - User ID: **polycom**
  - Password: **polycom**The command line interface displays.
- 3 Select **Management network setup**, then **OK**.
- 4 Select **eth0**, then **OK**.
- 5 Select **Static address setup**.  
The RealPresence Access Director system does not support the **Static route setup** or **Set DHCP on** menu options.
- 6 Enter the **IP address**, **Subnet mask**, and **Default gateway**.
- 7 Select **Save configuration**.  
Network services restart.
- 8 Log in to the RealPresence Access Director system's web user interface to complete your initial configuration. See [Configure Initial Network Settings–Virtual Edition](#).

## **Install the RealPresence Access Director System Software Using the RealPresence Platform Director System**

When you install an instance of the RealPresence Access Director, Virtual Edition, using the RealPresence Platform Director system, you must provide initial network settings during the installation process. For complete instructions on installing an instance and managing licenses, see the *Polycom RealPresence Platform Director System Administrator Guide*, available at [Polycom Support](#).

## To install the RealPresence Access Director System Software Using the RealPresence Platform Director System:

- 1 Install an instance of the RealPresence Access Director, Virtual Edition, according to the instructions in the *Polycom RealPresence Platform Director System Administrator Guide*.
- 2 Enter the following network information during the installation:
  - **IPv4 Address:** the static or DHCP-assigned IP address of the virtual instance of the RealPresence Access Director system.  
If you use a DHCP-assigned IP address, you must assign a static IP address when you access the RealPresence Access Director web user interface for the first time. After you assign a static IP address, DHCP is disabled.
  - **IPv4 Subnet Mask:** the subnet mask for the RealPresence Access Director system's static IP address.
  - **IPv4 Default Gateway:** the IP address of the gateway used to route network traffic outside the subnet.
- 3 After the installation is complete, log in to the RealPresence Access Director system's web user interface to complete your initial configuration. See [Configure Initial Network Settings–Virtual Edition](#).

## Appliance Edition Installation

If you have ordered the RealPresence Access Director, Appliance Edition, you will need to install the server. If the RealPresence Access Director system software is not pre-installed on your server, you can install the system software using the RealPresence Access Director USB Configuration Utility and DVD, or just the DVD.

To install the RealPresence Access Director, Appliance Edition, complete the following process:

- Review the most recent *Polycom RealPresence Access Director System Release Notes*
- [Unpack and Install the Hardware](#)
- [System Software Installation](#)

## Unpack and Install the Hardware

The RealPresence Access Director, Appliance Edition, can be installed on the following servers:

- Polycom Rack Server 620 (R620)
- Polycom Rack Server 220 (R220)

### To unpack and install the hardware:

- 1 Examine the shipping container for damage. If you find damage, file a claim with the delivery carrier. Polycom is not responsible for damage sustained during shipment of this product.
- 2 Open and review the container packing slips.
- 3 Open the container and examine the contents for damage. If you find damage, file a claim with the delivery carrier. Keep all shipping materials in case you need them later.
- 4 Unpack your system and identify each item. A single-server RealPresence Access Director, Appliance Edition, shipment includes the items listed in [Contents of Shipment](#).

- 5 Assemble the rails and install the server in the rack according to the instructions for your server model:
  - Dell R620 – *Rack Installation* (available at <http://support.dell.com/support/edocs/systems/peR620/en/index.htm>)
  - Dell R220 – *Getting Started Guide* (available at <http://www.dell.com/support/home/us/en/19/product-support/product/poweredge-r220/manuals>)
- 6 Connect the server's power cable(s) to the server and connect a VGA cable from the server to the monitor.
- 7 Connect all power cables in to a grounded electrical outlet or separate power source, such as an uninterruptible power supply (UPS) or power distribution unit (PDU).
- 8 Connect a keyboard to the server.
- 9 Press the power button on the server and on the monitor.  
The power indicator lights should turn on.
- 10 Create one access password for BIOS.
- 11 Set the correct system time in BIOS.
- 12 Install the bezel (optional).
- 13 Connect the eth0 network interface port to your enterprise network as follows:
  - On the R620 server, use the Ethernet port labelled **GB 1**.
  - On the R220 server, use the Ethernet port engraved with **Port 0** on the left side of the back of the server.



**Use the eth0 network interface port to connect to your enterprise network**

To configure the initial network settings on the RealPresence Access Director server, you must use the eth0 network interface port to connect to your enterprise network.

## Contents of Shipment

Shipments of both the Polycom Rack Server 620 and the Polycom Rack Server 220 include the server and other contents. You should verify the type of server and other contents of your shipment when you unpack the system. As noted in the following table, some items may arrive in a separate shipment.

Item	R620	R220
1 Polycom Rack Server	X	X
1 system DVD	May be shipped separately	May be shipped separately
1 blank USB flash drive	X	X
1 USB flash drive labeled <i>Diagnostics</i> that contains server diagnostics utilities. Use these utilities only under the direction of Polycom Global Services.	X	X
Power cord(s)	May be shipped separately	May be shipped separately

Item	R620	R220
Rail kit	Slide rails with cable management arm	Static rails
Bezel with Polycom badge	X	X
RealPresence Access Director, Appliance Edition, license and activation key	May be shipped separately	May be shipped separately
Polycom warranty letter	X	X
<i>Dell Product Information Guide</i>	X	X

## System Software Installation

After you install the RealPresence Access Director system server, you can install the system software by using the USB Configuration Utility and the system DVD, or by using only the DVD.

The USB Configuration Utility enables you to configure your initial system settings and save them to the blank USB flash drive. When you insert the USB flash drive into the server and then install the system software from the DVD, your initial settings will be configured during installation.

If you install the system software using only the DVD, you will be prompted to enter your initial settings during the installation process.

Before you install the system, complete the First-Time Setup Worksheet to note your general network settings (see [Complete the First-Time Setup Worksheet](#)). Then follow the instructions for the installation method you choose:

- [Install the System Software Using the USB Configuration Utility and DVD](#)
- [Install the System Software Using the DVD](#)

## Install the System Software Using the USB Configuration Utility and DVD

You can download the RealPresence Access Director, Appliance Edition, USB Configuration Utility to the blank USB flash drive shipped with your system and use this tool to configure your system.



### Caution: Do not use other USB devices during installation

When you install the RealPresence Access Director system software on the server, no other USB device can be attached to the server. Ensure that only the USB flash drive with the USB Configuration Utility files is connected to the server before you continue the installation. After the installation is complete, other USB devices may be connected to the server.

### To install the system software using the USB Configuration Utility and DVD:

- 1 On a Windows computer, download the RealPresence Access Director USB Configuration Utility ZIP file from [support.polycom.com](http://support.polycom.com).
- 2 Connect the blank USB flash drive shipped with your system to the Windows computer.

- 3 Unzip the USB Configuration Utility files *to the root of the blank USB drive*. The USB Configuration Utility files must be at the root of the flash drive, not in a folder.

**Note:** Install and run the USB Configuration Utility files only on the blank (unused) USB flash drive included in your RealPresence Access Director server shipment.

- 4 Double-click **usb-gui.exe** to start the USB Configuration Utility.



- 5 Enter the network values from the [First-Time Setup Worksheet](#).
- 6 Click **Save**.  
Your configuration settings are saved to the root of the USB flash drive.
- 7 Remove the USB flash drive from the computer.
- 8 Turn on the RealPresence Access Director system server and insert the DVD.
- 9 Insert the USB flash drive into one of the server's USB ports and disconnect all other USB devices.
- 10 Restart the system server.
- 11 The server boots from the DVD, and the installation starts. Installation takes approximately 15 minutes, after which the DVD ejects and the server restarts. During startup, the server reads the network settings from the USB flash drive and applies them to your RealPresence Access Director system.
- 12 From a Windows computer, log in to the RealPresence Access Director web-based user interface and complete your initial configuration. See [System Configuration](#).

## Install the System Software Using the DVD

You can install the RealPresence Access Director system software using only the system DVD included in your shipment.



### To install the system software using the DVD:

- 1 Connect a monitor and keyboard to the server.
- 2 Insert the DVD into the server and turn on the server.
- 3 At the system prompts, configure the following settings for your system and press **Enter** after you complete each setting.

**Note:** To accept the default settings, press **Enter** at each prompt without changing the default information.

Prompt	Default Setting
Enter the RPAD profile	2
Enter the RPAD hostname	rpad
Enter the RPAD domain name	
Enter the RPAD IP address	192.168.200.12
Enter the netmask for the RPAD	255.255.255.0
Enter the Default Gateway for the RPAD	192.168.200.1
Enter a DNS for the RPAD	198.168.1.100



**Note: System default settings can be revised after installation**

If you accept the system default settings during the initial installation, you can later revise the settings from the RealPresence Access Director system web user interface.

- 4 Press **ENTER** to start the installation process.
- 5 Installation takes approximately 15 minutes, after which the DVD ejects and the server restarts.
- 6 From a Windows computer, log in to the RealPresence Access Director web-based user interface and complete your initial configuration. See [System Configuration](#).

# System Configuration

---

After you install your RealPresence Access Director system, Appliance or Virtual Edition, you need to complete the initial configuration of your system, as described in the following topics:

- [Log in to the RealPresence Access Director System Web User Interface](#)
- [Add a New Administrator Account](#)
- [Delete the Default Administrator Account](#)
- [Configure Initial Network Settings–Virtual Edition](#)
- [Configure Initial Network Settings–Appliance Edition](#)
- [Additional Configuration](#)

## Log in to the RealPresence Access Director System Web User Interface

You must complete the initial configuration of your RealPresence Access Director system from the web user interface.

### To log in to the RealPresence Access Director system web user interface:

- 1 On a Windows computer connected to the same network subnet as the RealPresence Access Director system, open a browser window and enter your system's IP address as follows:
  - If you accepted the default settings during installation of the Appliance Edition, enter  
`https://192.168.200.12:8443/`
  - If you assigned a static IP address for your Appliance Edition or Virtual Edition system, enter  
`https://<yourstaticIPaddress>:8443/`
  - If you used a DHCP-assigned IP address for the Virtual Edition instance you installed, enter  
`https://<DHCPIPAddress>:8443/`

The end-user license agreement for the RealPresence Access Director system displays.

- 2 Click **Accept** and log in to the system with the following credentials:
  - **User ID:** admin
  - **Password:** Polycom12#\$

The RealPresence Access Director system's web user interface opens, displaying the Dashboard. From its menus, you can complete your system configuration.

## Add a New Administrator Account

One administrator account is created when you install the RealPresence Access Director system. After you log in to the web user interface, Polycom strongly recommends that you create a new administrator user account with personal login information. After you add the new administrator account, you should then delete the original administrator account created during installation.

When you use the RealPresence Platform Director system to install an instance of the RealPresence Access Director, Virtual Edition, you must specify the administrator user credentials for the RealPresence Access Director system. The administrator credentials that you enter in the RealPresence Platform Director system **MUST** match the administrator credentials in the RealPresence Access Director system. Therefore, if you change the administrator user credentials in the RealPresence Access Director web user interface, you must update the credentials for that instance in the RealPresence Platform Director system. See the Polycom RealPresence Platform Director System Administrator Guide, available at [support.polycom.com](http://support.polycom.com).

### To add a new administrator account:

- 1 In the RealPresence Access Director user interface, go to **User > Users > Add**.
- 2 In **General Info**, complete the following fields:

Field	Description
First name	User's first name
Last name	User's last name
User ID	User's login name
Password	User's system login password <b>Note:</b> The password length must be 9–20 characters and contain at least one upper case letter, one lower case letter, and one number.
Confirm Password	Repeat user's system login password

- 3 Click **Associated Roles**.
- 4 Under **Available roles**, select **Administrator**.
- 5 Click the right arrow to add the **Administrator** role to the **Selected roles** list.
- 6 Click **OK**.
- 7 If you have a Virtual Edition system, log out of the RealPresence Access Director user interface and enter the new administrator user credentials in the RealPresence Platform Director system.

## Delete the Default Administrator Account

After you create a new administrator account, you need to delete the default administrator account created when you installed the system.



**Caution: For virtual instances, do not delete the original administrator account until after you revise the user credentials in the RealPresence Platform Director system**

After you create a new administrator account in the RealPresence Access Director user interface, you must log out and then update the administrator user credentials in the RealPresence Platform Director system. You can then log back in to the RealPresence Access Director system and delete the original (default) administrator account.

### To delete the original administrator account:

- 1 In the RealPresence Access Director user interface, go to **User > Users**.
- 2 Select the administrator account that was created during the initial installation of the system.
- 3 Under **Actions**, click **Delete**.
- 4 In the **Confirm Action** dialog, click **Yes** to delete the account.

## Configure Initial Network Settings–Virtual Edition

When you install an instance of the RealPresence Access Director, Virtual Edition, you must provide the following network settings during the installation process:

- **IPv4 Address:** the static or DHCP-assigned IP address of the virtual instance of the RealPresence Access Director system.
  - If you use a DHCP-assigned IP address, you must assign a static IP address when you access the RealPresence Access Director web user interface for the first time. After you assign a static IP address, DHCP is disabled.
- **IPv4 Subnet Mask:** the subnet mask for the RealPresence Access Director system's static IP address.
- **IPv4 Default Gateway:** the IP address of the gateway used to route network traffic outside the subnet.

### To configure network settings in the Virtual Edition:

- 1 In the RealPresence Access Director user interface, go to **Admin > Network Settings**.
- 2 Click **Configure Network Setting**, then complete the following fields:
  - **Hostname:** Enter the hostname of the RealPresence Access Director system.
  - **Primary DNS:** Enter the IP address of the DNS server.
- 3 Click **Next**.
- 4 In the **Step 2 of 3: Advanced Network Settings** window, do one of the following:
  - If you assigned a static IP address when you installed your system, confirm the **IPv4 Address** is correct.
  - If you used a DHCP-assigned IP address, enter a static **IPv4 Address**.
- 5 Confirm the following system values are correct:
  - **IPv4 Subnet Mask**
  - **IPv4 Default Gateway**
- 6 Click **Next**.

- 7 In the **Step 3 of 3: Service Network Settings** window, select the static IP address of the eth0 interface for each type of traffic, as shown in the following table:

Settings	Field
SIP/H.323	<ul style="list-style-type: none"> <li>• External signaling IP</li> <li>• Internal signaling IP</li> </ul>
Media Relay	<ul style="list-style-type: none"> <li>• External relay IP</li> <li>• Internal relay IP</li> </ul>
Management IP	<ul style="list-style-type: none"> <li>• Management IP</li> </ul>
Access Proxy	<ul style="list-style-type: none"> <li>• External Access Proxy IP           <ul style="list-style-type: none"> <li>▲ If the eth0 IP address is not already listed, select it from the <b>Available IP address</b> list and click the right arrow to move the IP address to the <b>External Access Proxy IP</b> list.</li> </ul> </li> <li>• Internal Access Proxy IP</li> </ul>

- 8 Click **Done**, then click **Commit and Reboot Now**.  
The system reboots and applies your network settings.

## Configure Initial Network Settings—Appliance Edition

Some network settings are configured when you install the system software. You can configure the remaining settings from the web user interface.



### Note: Configure Network Settings for eth0

Configure your initial network settings for the eth0 network interface. You can configure the network settings for eth1, eth2, and/or eth3 after the initial configuration. See the *Polycom RealPresence Access Director System Administrator Guide* for further instructions.

### To configure initial network settings in the Appliance Edition:

- 1 Go to **Admin > Network Settings**.
- 2 Click **Configure Network Setting**.
- 3 In the **Step 1 of 3: General Network Settings** window, confirm your system values for the following settings (these should match the values in your First Time Setup Worksheet):
  - **Hostname**
  - **Primary DNS**
  - **Domain**
- 4 Click **Next**.
- 5 In the **Step 2 of 3: Advanced Network Settings** window, confirm or revise the values you entered for the eth0 interface when you installed the system:
  - **IPv4 Address:** the static IP address of the RealPresence Access Director system.
  - **IPv4 Subnet Mask:** the subnet mask of the RealPresence Access Director system's static IP address.

- **IPv4 Default Gateway:** the IP address of the gateway server used to route network traffic outside the subnet.

6 Click **Next**.

7 In the **Step 3 of 3: Service Network Settings** window, select the IP address of the eth0 interface for each type of traffic, as shown in the following table:

Settings	Field
SIP/H.323	<ul style="list-style-type: none"> <li>• <b>External SIP/H.323 Signaling IP</b></li> <li>• <b>Internal SIP/H.323 Signaling IP</b></li> </ul>
Media Relay	<ul style="list-style-type: none"> <li>• <b>External Media Relay IP</b></li> <li>• <b>Internal Media Relay IP</b></li> </ul>
Management	<ul style="list-style-type: none"> <li>• <b>Management IP</b></li> </ul>
Access Proxy	<ul style="list-style-type: none"> <li>• <b>External Access Proxy IP</b> <ul style="list-style-type: none"> <li>▲ If the eth0 IP address is not already listed, select it from the <b>Available IP address</b> list and click the right arrow to move the IP address to the <b>External Access Proxy IP</b> list.</li> </ul> </li> </ul>

8 Click **Done > Commit and Reboot Now**.

The system restarts and applies your network settings.

## Additional Configuration

Once you have configured the initial settings for your RealPresence Access Director, Appliance or Virtual Edition, you will need to perform additional configuration tasks.

See the *Polycom RealPresence Access Director System Administrator Guide* to complete these tasks:

- Configure time settings
- Configure network settings for more than one network interface
- Configure certificates
- Configure basic access control list rules
- Configure access proxy settings
- Configure SIP and H.323 signaling and media relay settings
- Associate users with roles. You will need at least one user with the administrator role
- Integrate the system with a Microsoft Active Directory
- Create federated or neighbored relationships with systems outside of your enterprise network
- Configure log settings

See the *Polycom Unified Communications in RealPresence Access Director System Environments Solution Deployment Guide* to complete these tasks:

- Configure the DNS settings
- Configure the firewall and ports
- Integrate the system with a Polycom RealPresence DMA system for gatekeeper and SIP registrar services

- Integrate the system with a Polycom RealPresence Resource Manager system that dynamically provisions endpoints
- Deploy two RealPresence Access Director systems in a tunnel configuration.