

Model Numbers

Handset models: 602X

Charger models: PCS1850, PCD1850, PCQ1850

Battery Pack models: PBP0850, PBP1300, PBP1850

Polycom, Inc.

4750 Willow Road,

Pleasanton, CA 94588

<http://www.polycom.com>



QUICK REFERENCE GUIDE

SpectraLink 6020 Wireless Telephone

Notice

Polycom, Inc. has prepared this document for use by Polycom personnel and customers. The drawings and specifications contained herein are the property of Polycom and shall be neither reproduced in whole or in part without the prior written approval of Polycom, nor be implied to grant any license to make, use, or sell equipment manufactured in accordance herewith.

Polycom reserves the right to make changes in specifications and other information contained in this document without prior notice, and the reader should in all cases consult Polycom to determine whether any such changes have been made.

No representation or other affirmation of fact contained in this document including but not limited to statements regarding capacity, response-time performance, suitability for use, or performance of products described herein shall be deemed to be a warranty by Polycom for any purpose, or give rise to any liability of Polycom whatsoever.

Patent Information

The accompanying product is protected by one or more US and foreign patents and/or pending patent applications held by Polycom, Inc.

Trademark Information

Polycom® and the logo designs

SpectraLink®

LinkPlus

Link

Are trademarks and registered trademarks of Polycom, Inc. in the United States of America and various countries. All other trademarks used herein are the property of their respective owners.

Copyright Notice

Copyright © 2007, 2008 Polycom, Inc.

All rights reserved under the International and pan-American Copyright Conventions.

No part of this manual, or the software described herein, may be reproduced or transmitted in any form or by any means, or translated into another language or format, in whole or in part, without the express written permission of Polycom, Inc.

Do not remove (or allow any third party to remove) any product identification, copyright or other notices.


Every effort has been made to ensure that the information in this document is accurate. Polycom, Inc. is not responsible for printing or clerical errors. Information in this document is subject to change without notice and does not represent a commitment on the part of Polycom, Inc.

For regulatory information, please see Regulatory Information (1725-36085-001).


Please contact your Polycom Authorized Reseller for assistance.

1725-36093-001

Revision B

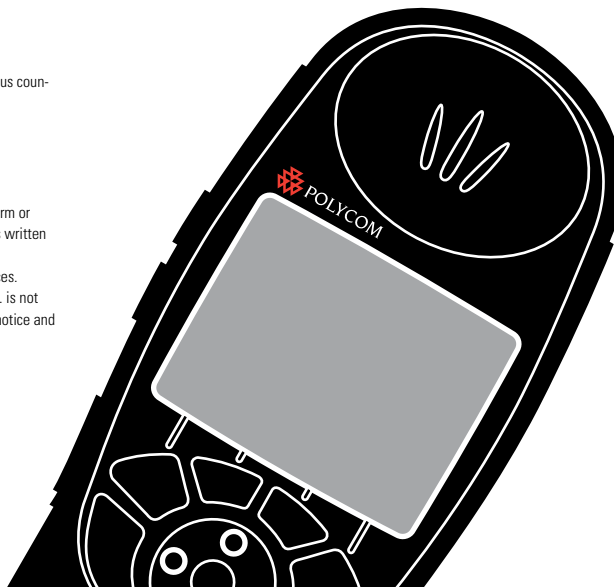

SpectraLink 6020 Wireless Telephone

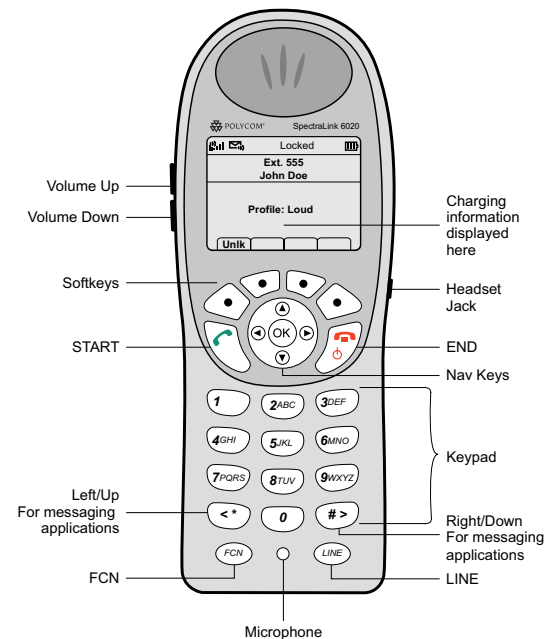


If you want to Then

- Turn handset on** Press and hold **END** until two chirps sound. When the key is released, the in-service tone sounds.
- Turn handset off** Press and hold **END**. One chirp will sound. If in a call, hang up first, then turn off.
- Unlock keypad** Press the **Unlk** softkey, then **#**.
- Lock keypad** Press the **Cfg** softkey then **NavOK**, to manually lock the keypad. See *The Config Menu* to activate or deactivate Autolock.*
- Make an internal call** Press **START**, wait for dial tone, then dial the extension.
- Make an external call** Press the **START** key, wait for dial tone, then dial the number just as you would with your desk phone.
- Select line** Press **LINE** and the number key corresponding to the desired line.
- Dial number** Press the number keys.
- Answer call** The handset will ring or vibrate to alert you of an incoming call. Additionally, a line indicator on the display may flash and the display may show information about the call, such as caller's name and extension.
- To answer a call, press **START** and hold the earpiece to your ear. You may also activate the speakerphone function or use a headset.
- Answer call on second line** If you are on a call and hear subdued ringing, a call is coming in on a second line. To answer this call, put your first call on hold and press the **Line** key then the line number of the second call.
- Mute microphone** Press the **Mute** softkey.
- Place call on hold** Press the **Hold** softkey.
- Resume held call** Press the **LINE** key followed by the line number key.

If you want to Then

- Hang up** Press **END**. Be sure to do this at the end of each call to return to the standby mode.
- Change speaker volume** Press the up/down volume buttons on the side of the handset during the call.
- Change ring volume** Press the up/down volume buttons on the side of the handset during ringing. The default ring volumes are set in the User Profile menus.*
- Silence while ringing** Press **END** to silence the ring.
- Activate speakerphone** Press the **Spkr** softkey and speak towards the handset. Note that this feature may be unavailable in your facility.
- Headset answer** Press any key (other than **END**) to answer a call when a headset is plugged-in.
- Headset volume** Press the up/down volume buttons on the side of the handset during the call.
- Change Profile** Press the **Prof** softkey and use the **Nav** keys to select a new profile while in standby mode.*
- Backlight** The backlight comes on when any key is pressed or when there is an incoming call and stays on for 10 seconds. It turns off after 10 seconds if another key is not pressed within that period.

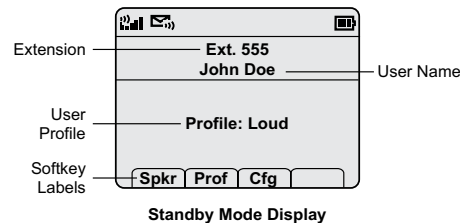

* Please see the *SpectraLink 6020 Wireless Telephone and Accessories User Guide* for more information.

Si Vous Voulez Vous Devez

- Mettre en marche le combiné** Appuyer et tenir **END** jusqu'à ce que vous entendiez deux sifflements.
- Mettre le combiné hors tension** Appuyer et tenir **END**. Un sifflement se fera entendre. Pendant un appel, terminez-le et ensuite mettre hors tension.
- Déverrouiller le clavier** Appuyer sur la touche programmable **Unlk**, puis sur **#** pour déverrouiller le clavier.
- Verrouiller le clavier** Appuyer sur la touche programmable **Cfg** puis sur **NavOK**, pour verrouiller manuellement le clavier. Se référer à *The Config Menu* pour activer ou désactiver Autolock.*
- Faire un appel interne** Appuyer sur **START**, attendre le signal sonore et composer le numéro du poste désiré.
- Faire un appel externe** Appuyer sur la touche **START**, attendre le signal sonore et composer le numéro comme vous le feriez sur votre téléphone.
- Choisir une ligne** Appuyer sur **LINE** et sur la touche du numéro correspondant à la ligne désiré.
- Composer un numéro** Appuyer sur les touches numérotées.
- Répondre à un appel** Le combiné sonnera ou vibrera pour vous avertir d'un appel. En plus, un indicateur sur votre afficheur clignotera et l'afficheur vous donnera les informations au sujet de l'appel, tels que le nom et le numéro du poste.
- Pour répondre à l'appel appuyez sur **START** et placer l'écouteur à votre oreille. Vous pouvez également activer le mains-libres ou vous servir d'un micro-casque.
- Répondre à un appel sur une deuxième ligne** Si vous répondez déjà à un appel et que vous entendez une sonnerie discrète, vous avez un deuxième appel. Pour répondre à cet appel vous devrez premièrement mettre votre premier appel en attente et appuyer et tenir la touche **LINE** puis sur la ligne du deuxième appel.
- Mute le microphone** Appuyer sur la touche programmable **Mute**.

Si Vous Voulez Vous Devez

- Mettre un appel en attente** Appuyer sur la touche programmable **Hold**.
- Revenir à l'appel en attente** Appuyer sur la touche **LINE** suivi de la touche du numéro en attente.
- Terminer un appel** Appuyer sur la touche **END**. Assurez-vous de le faire après chaque appel pour retourner en mode d'attente.
- Ajuster le volume** Appuyer sur les touches de volume sur le coté du combiné pendant l'appel.
- Ajuster le volume de la sonnerie** Appuyer sur les touches de volume sur le coté du combiné pendant un appel. Les volumes de sonnerie se retrouvent dans le menu du User Profile.
- Taire la sonnerie** Appuyer sur la touche **END** pour taire la sonnerie.
- Activer les mains-libres** Appuyer sur la touche **Spkr** et parler en direction du combiné. Veuillez noter que ce service n'est pas disponible à tous.
- Répondre avec le micro-casque** Appuyer sur n'importe quelle touche (à l'exception de **END**, d'une touche **Nav**, ou d'une touche programmable) pour répondre à un appel lorsque le micro-casque est branché.
- Ajuster le volume du micro-casque** Appuyer sur les touches de volume sur le coté du combiné pendant l'appel.
- Changer le profil** Appuyer sur la touche programmable **Prof** et vous servir des touches **Nav** pour sélectionner un nouveau profil lorsque vous serez en mode d'attente.
- Rétroéclairage** Le rétroéclairage entre en fonction dès qu'on appuie sur une touche ou lorsque l'on recoit un appel et il restera en fonction pendant dix secondes. Après ce laps de temps si aucune autre touche n'est activée il s'éteindra.