



Help

3.4 | June 2015 | 3725-69927-004B

Polycom[®] RealPresence[®] Mobile for Android[®] Tablets



Copyright© 2013-2015, Polycom, Inc. All rights reserved. No part of this document may be reproduced, translated into another language or format, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc.

6001 America Center Drive
San Jose, CA 95002
USA

Trademarks Polycom®, the Polycom logo and the names and marks associated with Polycom products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries.



All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom.

End User License Agreement By installing, copying, or otherwise using this product, you acknowledge that you have read, understand and agree to be bound by the terms and conditions of the End User License Agreement for this product. The EULA for this product is available on the Polycom Support page for the product.

Patent Information The accompanying product may be protected by one or more U.S. and foreign patents and/or pending patent applications held by Polycom, Inc.

Open Source Software Used in this Product This product may contain open source software. You may receive the open source software from Polycom up to three (3) years after the distribution date of the applicable product or software at a charge not greater than the cost to Polycom of shipping or distributing the software to you. To receive software information, as well as the open source software code used in this product, contact Polycom by email at OpenSourceVideo@polycom.com.

Disclaimer While Polycom uses reasonable efforts to include accurate and up-to-date information in this document, Polycom makes no warranties or representations as to its accuracy. Polycom assumes no liability or responsibility for any typographical or other errors or omissions in the content of this document.

Limitation of Liability Polycom and/or its respective suppliers make no representations about the suitability of the information contained in this document for any purpose. Information is provided "as is" without warranty of any kind and is subject to change without notice. The entire risk arising out of its use remains with the recipient. In no event shall Polycom and/or its respective suppliers be liable for any direct, consequential, incidental, special, punitive or other damages whatsoever (including without limitation, damages for loss of business profits, business interruption, or loss of business information), even if Polycom has been advised of the possibility of such damages.

Customer Feedback We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to DocumentationFeedback@polycom.com.

Polycom Support Visit the [Polycom Support Center](#) for End User License Agreements, software downloads, product documents, product licenses, troubleshooting tips, service requests, and more.

Contents

Polycom® RealPresence® Mobile Modes of Operation	4
About the RealPresence Mobile Application	4
Configure Polycom® RealPresence® Mobile in Standalone Mode	5
Provision Polycom® RealPresence® Mobile Using BroadSoft Device Management Server	7
Set up BroadSoft Device Management Server to Provision Polycom® RealPresence® Mobile	8
Configure Polycom® RealPresence® Mobile in Managed Mode	8
Place and Receive Calls	11
Place Calls	11
Place Calls from Your Corporate Directory or Local Address Book	12
Manage Calls	12
Portrait Mode in a Call	13
Enable and Use SmartPairing	13
Use the In-Call Toolbar	15
Toolbar Call Icons	15
Work with Content	16
Manage Contacts	16
Manage Cameras	18
Use Far End Camera Control (FECC)	18
Attend a CloudAXIS Meeting	19
Troubleshooting	19

Polycom® RealPresence® Mobile Modes of Operation

RealPresence Mobile has two modes of operation:

- In standalone mode, RealPresence Mobile supports registration and calling with an H.323 gatekeeper and/or a SIP server. It does not require registration with a Polycom provisioning server such as a RealPresence Resource Manager system.

In standalone mode, you have direct access to the configuration and settings of RealPresence Mobile. You must purchase a license and enter licensing information manually to use this RealPresence Mobile beyond the 30-day trial period.


- In managed mode, RealPresence Mobile registers with a Polycom provisioning server like a RealPresence Resource Manager system. The Polycom provisioning server configures RealPresence Mobile automatically. It also provides access to a centralized directory server.

In managed mode, the Polycom provisioning server manages licensing of RealPresence Mobile, so you do not need to purchase an individual license.

About the RealPresence Mobile Application

Before you begin configuring RealPresence Mobile, get familiar with the application's user interface. The following figures show the RealPresence Mobile main window and the in-call toolbar. See [Use the In-Call Toolbar](#) for more specific information about in-call toolbar.

Android tablet main window user interface

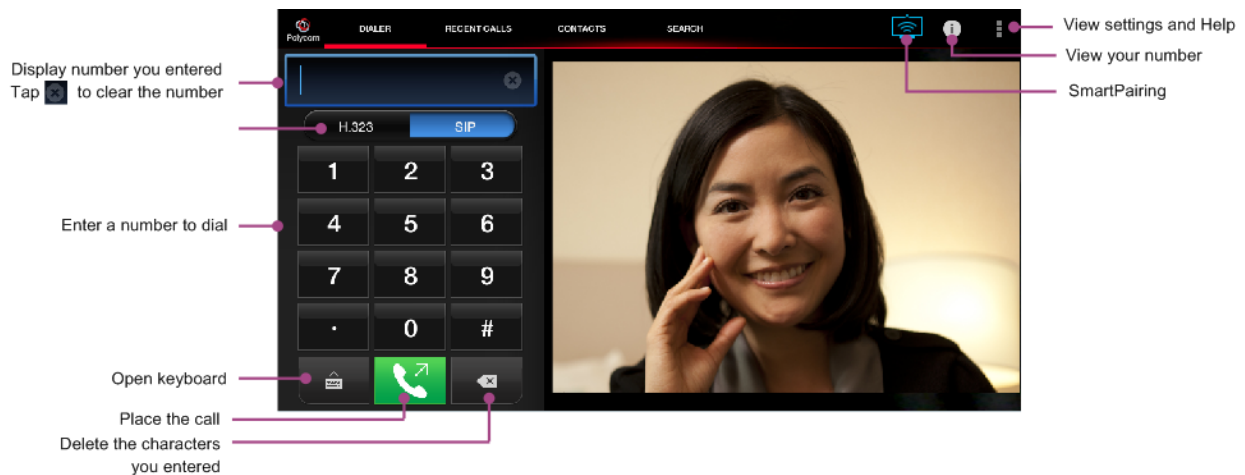




Android tablet in-call toolbar



Configure Polycom® RealPresence® Mobile in Standalone Mode

Standalone mode does not require registration with a Polycom provisioning server. You need to configure Polycom® RealPresence® Mobile manually.




To configure RealPresence Mobile in standalone mode:

- 1 From your device's **Application** list, tap .
- 2 To register your product with Polycom, select the **Register with Polycom** check box and then enter your e-mail address. Your user information, such as your e-mail address, your device type, and the RealPresence Mobile version, will be sent to Polycom. Clear this check box if you do not want to send the information.
- 3 Tap **Next**.
- 4 Tap **Skip sign in**.
- 5 Tap  on your device.
- 6 Tap **Settings**.
- 7 Configure the settings shown in the [Android Settings](#) table.
- 8 Tap  to go back the main window.
- 9 Enable or disable the SDP size adjustment feature. Enable this feature to shorten Session Description Protocol (SDP) size to avoid call failure caused by SDP size limitation for some users. Enter #001# from the Dialpad to enable or disable this feature.




Video content, FECC, H.264 high profile, RFC2833 for DTMF, and SVC cannot be used

When you enable **SDP Size Adjustment**, video content, FECC, H.264 high profile, RFC2833 for DTMF, and SVC cannot be used.

- 10 To check your connection status, tap .
- 11 If the gatekeeper or server registration fails,  is displayed on the main window. Tap  to see more information.

Android Settings

	Options	Descriptions
General Settings	Auto Start	Specifies whether to start RealPresence Mobile automatically when you power on the device.
	Show Status Notification	Determines whether to show network status on the lower-right corner of your screen.
	Display Name	Name to display to the far end during a call.
	Keep Alive in Sleep Mode	Allows the system to detect incoming calls more while asleep. This increases battery consumption.
	SmartPairing	Select the SmartPairing check box to allow the device to pair with a nearby Polycom HDX or RealPresence Group Series system.
	Auto-answer incoming calls	Specifies whether to answer incoming calls automatically.
	Mute video for auto-answered calls	Allows the system to mute the video of auto-answered calls.
	Mute audio for auto-answered calls	Allows the system to mute the audio of auto-answered calls.
	Send the log report	Send logs by clicking Send the log report , and then enter the recipients' e-mail addresses. Note: You need to configure the default e-mail account on your device used to send logs.
	Profile	Configure your profile as follows: <ul style="list-style-type: none"> Tap  to take a photo or choose a photo. Enter your profile information to show on your business card in standalone mode.
Network Settings	WLAN Call Rate	Call rate to use for calls on a WLAN network.
	3G/4G Call Rate	Call rate to use for calls on a 3G or 4G network.
Test Features	Enable Hardware Codec	Enable this option to get high-quality video. The password is 456. RealPresence Mobile will restart after you enable this feature. After restart, the 768 Kbps and 1 Mbps call rates will be available under Network Settings. Choose a high call rate to get better quality video. After this feature is enabled, SVC, SmartPairing, and content sending will be disabled. You can see this feature only on Tegra-3 tablets. Polycom recommends you to test this feature and send us logs via the Polycom Community .

Android Settings

	Options	Descriptions
H.323 Settings	Enable H.323 Calls	Enable or disable H.323 calls.
	Gatekeeper Registration	Enable or disable registering your system with a gatekeeper.
	Select Gatekeeper	Internal or external gatekeeper to use when making calls.
	Internal Gatekeeper	IP address or FQDN of the internal gatekeeper. Example formats are 10.11.12.13 or gatekeeper.company.com.
	External Gatekeeper	IP address or FQDN of the external gatekeeper. Example formats are 10.11.12.13 or gatekeeper.company.com.
	H.323 Name	Name to display to the far site during calls. For example, you can enter your first name.
	H.323 Extension	Name that gatekeepers use to identify this system. Your organization's dialing plan may define the names you can use.
SIP Settings	Enable SIP Calls	Enable or disable SIP calls.
	Transport Protocol	Protocol the system uses for SIP signaling: <ul style="list-style-type: none">• TCP: reliable transport.• UDP: best-effort transport.• TLS: encrypted transport
	SIP Registration	Enable or disable registering your system with a SIP server.
	SIP Proxy Server	IP address or FQDN of the SIP proxy server.
	SIP Registrar Server	IP address of the SIP registrar server.
	Domain	Domain name for authentication with SIP registrar server: <ul style="list-style-type: none">• If you use a Polycom DMA server as the SIP server, leave this field empty.• If you use a third-party SIP server, enter the domain name for authentication with the registrar server.
	SIP User Name	User name for authentication with a registrar server.
	Authorization Name	Name to use for authorization when registering with a SIP registrar server.
	SIP Password	Password for authentication with a registrar server.

Provision Polycom® RealPresence® Mobile Using BroadSoft Device Management Server

In standalone mode, RealPresence Mobile can register to BroadSoft Device Management Server to use provisioned features. Only LDAP search is not supported.

Set up BroadSoft Device Management Server to Provision Polycom® RealPresence® Mobile

To configure the BroadSoft Device Management Server for provisioning Polycom® RealPresence® Mobile, the BroadSoft Device Management administrator needs to pay attention to the following:

- Review the sample Polycom® RealPresence® Mobile file named `ProvisionData-template.xml` released with Polycom® RealPresence® Mobile. The file `ProvisionData-template.xml` is published on [Polycom Support](#).
- Decide what is to be provisioned in the customer deployment.
- Create your Polycom® RealPresence® Mobile provisioning template by defining the customer TAG set and assigning default values to each customer TAG.
- When adding a new Device Profile Type for RealPresence Mobile in the BroadSoft Device Management system, set the parameters to the values as follows:
 - Set **Device Access Context Name** to `dms`.
 - Set **Device Access URI** to `POLYCOM/RPM`
 - Use the customer TAG set that you defined as **Default System Tag Set** and **Tag Set**.
- When adding a new Device Profile Type file for the new created iDevice Profile Type, set the parameters to the values as follows:
 - Set **Device Access File Format** to `ProvisionData.xml`.
 - Set **Repository File Format** to `ProvisionData-%BWLOGIN-ID-1%.xml`.
 - Set **File Category** to `Dynamic Per-Device`.
 - Set **File Customization** to `Administrator and User`.

After creating this Device Profile Type file, create a device profile for it.

- When adding or editing existing users for RealPresence Mobile:
 - Choose **Use Custom Credentials** in the **Authentication** panel. The custom credentials will be the sign-in credentials for RealPresence Mobile.
 - Bind the created device profile to the user account.

If necessary, you can specify the Custom TAGs of the user account for the provisioning. The new values will overwrite the default values specified in the template `ProvisionData.xml` file.



After the configuration is done and the SRV record `_dmsconfig_tcp` is set on the DNS server properly, RealPresence Mobile can detect the provisioning server automatically using users' e-mails. Users can also specify the server when signing in TO RealPresence Mobile. RealPresence Mobile assumes each BroadSoft user has its specific provisioning data. If a user signs into RealPresence Mobile on multiple devices with the same user account, all the devices will get the same provisioning data.

Configure Polycom® RealPresence® Mobile in Managed Mode

After you register with a Polycom provisioning server, the provisioning server configures most of the settings automatically such as H.323 or SIP settings. In managed mode, you can use LDAP search feature, which is not supported under standalone mode.

To configure RealPresence Mobile in managed mode:

- 1 From your device's **Application** list, tap .

-
- 2 Enter your e-mail address. By default, your e-mail address, your device type, and the RealPresence Mobile version, will be sent to Polycom. When you clear the **Register with Polycom** check box, RealPresence Mobile will not send this information.
 - 3 Tap **Next**.
 - 4 Enter your user name and password. The provisioning server address is populated based on your e-mail address.
 - 5 Tap **Sign In**.
 - 6 Tap  .
 - 7 Tap **Profile > Settings** and then tap the photo area to take a photo or choose a photo. Configure the settings listed in the [Android Settings](#) table.
 - 8 Tap  to go back the main window.
 - 9 Enable or disable the SDP size adjustment feature. Enable this feature to shorten Session Description Protocol (SDP) size to avoid call failure caused by SDP size limitation for some users. Enter #001# from the Dialpad to enable or disable this feature.




Video content, FECC, H.264 high profile, RFC 2833 for DTMF, and SVC cannot be used

When you enable **SDP Size Adjustment**, video content, FECC, H.264 high profile, RFC 2833 for DTMF, and SVC cannot be used.

- 10 To check your connection status, tap .

The provisioning server configures the rest of the settings automatically. If server registration fails.



is displayed on the main window. Tap  to see more information.


Android Settings

	Options	Descriptions
General Settings	Auto Start	Specifies whether to start RealPresence Mobile automatically when you power on the device.
	Show Status Notification	Determines whether to show network status on the lower-right corner of your screen.
	Display Name	Name to display to the far end during a call.
	Keep Alive in Sleep Mode	Allows the system to detect more incoming calls while asleep. This increases battery consumption.
	SmartPairing	Select the SmartPairing check box to allow the device to pair with a nearby Polycom HDX or RealPresence Group Series system.
	Auto-answer incoming calls	Specifies whether to answer incoming calls automatically.
	Mute video for auto-answered calls	Allows the system to mute the video of auto-answered calls.
	Mute audio for auto-answered calls	Allows the system to mute the audio of auto-answered calls.
	Send the log report	Send logs by clicking Send the log report , and then enter the recipients' e-mail addresses. Note: You need to configure the default e-mail account on your device used to send logs.
NoiseBlock	Select this option to mask percussive sound (such as tapping and hands clapping) when no one is talking in a meeting.	
Network Settings	WLAN Call Rate	Call rate to use for calls on a WLAN network.
	3G/4G Call Rate	Call rate to use for calls on a 3G or 4G network.
Test Features	Enable Hardware Codec	Enable this option to get high quality video. The password is 456. RealPresence Mobile will restart after you enable this feature. After restart, the 768 Kbps and 1 Mbps call rates will be available under Network Settings. Choose a high call rate to get better quality video. After this feature is enabled, SVC, SmartPairing, and content sending will be disabled. You can see this feature only on Tegra-3 tablets. Polycom recommends you to test this feature and send us logs via the Polycom Community .

To sign out from the provisioning server:

- 1 Tap  on your device.
- 2 Tap **Sign Out**.

To force the RealPresence Mobile application to close:

- 1 Tap **Settings**.
- 2 Tap **Apps**.
- 3 Tap .
- 4 Tap **Force Stop**, and then tap **OK** to confirm.



Stop RealPresence Mobile properly

Do not close RealPresence Mobile by stopping the **LogService** and **MainService** from **Settings > Applications > Running Services**. If you do so and then launch the application again, you get a message saying that the application has stopped unexpectedly.

To check the current connection status and IP address:

- » Tap .

Place and Receive Calls

Using RealPresence Mobile, you can place and receive point-to-point calls. You can also join multipoint calls hosted by multipoint conferencing systems, such as Polycom RealPresence Collaboration Server, and by endpoints with multipoint capabilities, such as Polycom HDX® Series systems.

You can call contacts from your recent calls list or enter the contact numbers manually. If you register to a provisioning server, you can call contacts from your corporate directory. During a call, use the in-call toolbar to control your video, volume, and camera.




Check your service plan

Participating in a video call in a 3G or 4G network requires sending and receiving large amounts of data. Be sure that your service plan allows a sufficient level of data transfer to support video calling.

Place Calls

You can place calls by entering a contact number directly or by using your recent calls list.

To place a call by entering a number:

- 1 Tap **DIALER** and then enter the name or number to call. You can use any of the formats shown here:
 - 2555 (SIP user name or E.164 extension for H.323)
 - stereo.polycom.com (FQDN name)
 - <user>@<domain.com> (<SIP_username>@<domain.com>)
 - 10.11.12.13##1234 (signaling IP##conference ID for H.323)
 - 10.11.12.13 (IP address, including the dots)
 - 1234@10.11.12.13 (<SIP user name>@<IP address>)
- 2 Select the call type, SIP or H.323.
- 3 To enter an extension or password, tap .

-
- 4 Tap  to start the call.

To place a call from your recent calls list:



- 1 Tap **RECENT CALLS**.
- 2 Tap an entry to call.
Your recent calls list can hold up to 100 entries.

Place Calls from Your Corporate Directory or Local Address Book


When using RealPresence Mobile in managed mode, which provides LDAP service, you can place calls in several additional ways. Place calls from your corporate directory or from your local address book.



Registration problems

If a registration problem occurs,  is displayed at the bottom of the screen. Tap  for more information.

To place a call from your corporate directory:

- 1 Tap **SEARCH**.
- 2 Enter the name or part of the name of the contact you want to call, and then tap **Search**.
You need to use more specific key word to improve the search efficient. After you enter a key word and start to search contacts, you cannot cancel this operation.
- 3 Tap the contact name from the search results.
- 4 Tap  beside the device name that you want to call.
- 5 Tap **Place Call (H.323)** or **Place Call (SIP)**. If you cannot find the option **Place Call (H.323)** or **Place Call (SIP)**, the contact may have no H.323 extension or SIP URI configured. Contact your IT administrator.

To place a call from your local address book:

- 1 Tap **CONTACTS**.
- 2 Tap the contact name from the contacts list.
- 3 Tap **Place Call (H.323)** or **Place Call (SIP)**. If you cannot find the option **Place Call (H.323)** or **Place Call (SIP)**, the contact may have no H.323 extension or SIP URI configured. Contact your IT administrator.

Manage Calls

You can use RealPresence Mobile to make, answer, reject, or end calls.

To answer a call:

- » Tap .

To reject an incoming call:

- » Tap .

To end the current call:


- » Tap .



Incoming call notification display

Incoming call notification is displayed only when RealPresence Mobile is the active application.

To clear the recent calls list:

- 1 Tap **RECENT CALLS**.
- 2 To clear all recent calls, tap , and then tap **Yes**.

Portrait Mode in a Call

When you rotate your tablets 180 or 90 degree during a call, RealPresence Mobile will adjust the video accordingly and also send the adjusted content to far end systems.

If you enable SmartPairing, after you rotate your device 90 degree during a call, you cannot see the swipe call button.

This feature is available when you enable auto rotation on your device.



Far end in landscape mode to display portrait

If the far end displays the video in landscape mode, then only the center portion of the portrait mode display will be visible to the far end. For example, RealPresence Mobile will cut off the top and bottom portions to ensure that the video can be properly displayed in landscape mode.

Enable and Use SmartPairing

You can pair your device with a Polycom HDX or RealPresence Group Series system and control the paired Polycom HDX or RealPresence Group Series system, (for example, to place a call, adjust the call volume or end the call) using RealPresence Mobile. You can also transfer an ongoing call from your RealPresence Mobile to the paired HDX or RealPresence Group Series system.







Enable SmartPairing and Telnet first

You need to enable the SmartPairing feature and Telnet on the paired HDX or RealPresence Group Series systems for this feature to operate.



Before using this feature, you first need to enable SmartPairing on your RealPresence Mobile.

To enable SmartPairing:





- 1 Tap  and then tap **Settings**.
- 2 Tap **General Settings**.

-
- 3 Select the **SmartPairing** check box.
 - 4 Tap  to go back to the main window. After SmartPairing is enabled, you can see  on the main window.
 - 5 From the top right menu, tap  .
 - **Detected** If Auto Detection is turned on, IP addresses of nearby Polycom HDX or RealPresence Group Series system that have been detected are listed here.
 - **Manual Pairing** Enter an IP address of the desired Polycom HDX or RealPresence Group Series system to pair with it.
 - **Recent Connections** A list of Polycom HDX or RealPresence Group Series systems that have been paired recently. To delete a paired device from the Recent Connections list, tap and hold the item that you want to delete.


To place a call from the Polycom HDX or RealPresence Group Series system:

- 1 From the top menu, tap  .
- 2 Select a device from either the **Detected**, or the **Recent Connections** list. You also can enter a device address in the **Manual Pairing** field.
- 3 Enter a pairing password. After paired with the desired device, tap  .
- 4 Enter a number from the soft keyboard on the right.
- 5 Tap **Call**.


To transfer calls to a paired Polycom HDX or RealPresence Group Series system:

- 1 During a call, tap  on the bottom of the screen. The  moves to the middle of the screen. This icon appears when the system detects a Polycom HDX or RealPresence Group Series system, or has manually paired to Polycom HDX or RealPresence Group Series systems recently.
- 2 Flip  upward to transfer the call to the Polycom HDX or RealPresence Group Series system. If you do not want to transfer a call, flip  downward.
- 3 If more than one device appears, select the one you want. The call is disconnected from your RealPresence Mobile application and is transferred to the selected Polycom HDX or RealPresence Group Series system
If the call transferring fails, the call will be redirected to your RealPresence Mobile application.

To control calls on the Paired Polycom HDX or RealPresence Group Series system:

- 1 Use the in-call toolbar to control calls on the paired Polycom HDX or RealPresence Group Series system as shown in [Paired HDX on Android tablet](#).
 - **Place a call** Click this button and enter a desired number on the right soft keypad to place a call on the paired device
 - **Mute** Mute or unmute the call.
 - **Volume** Adjust the call volume.
 - **DTMF** Open the DTMF keypad.
 - **Hang up** End the call form the paired device.
- 2 Tap  and select **OK** to end the control.

Paired HDX on Android tablet

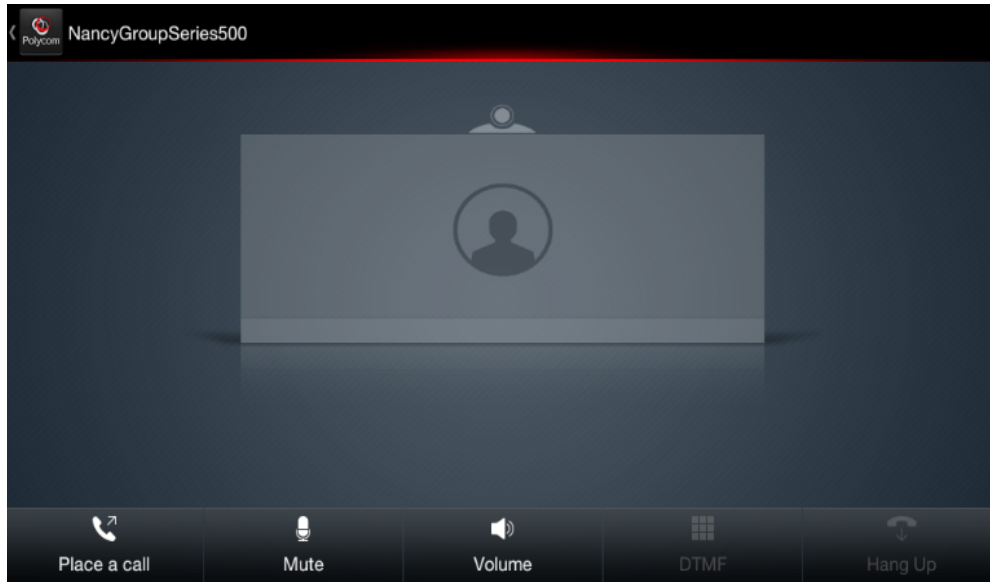







Use the In-Call Toolbar

During a call, tap the screen to view the in-call toolbar. Use the in-call toolbar to access additional features of the RealPresence Mobile application, for example, to switch cameras or mute your audio. See [About the RealPresence Mobile Application](#) for more information about the in-call tool bar window.

Toolbar Call Icons

The following table lists explains call icons.

Call Icons

Icon	Description
	Incoming calls
	Outgoing calls
	Missed calls
	Poor network connection
	Unstable network connection
	Good network connection

Work with Content

When you are registered with a provisioning server, you can view content sent by others in the call or show PDF files and pictures to others. The JPG, JPEG, PNG, and BMP picture formats are supported.



Share PDF files

You can save desired PDF files to share in either your device's SD card, or use applications such as Dropbox, or SkyDrive.

To share a PDF file or a picture during a call:

- 1 From the in-call tool bar, tap . Do one of the following:
 - Share a PDF file.
 - Tap **Select PDF File from Sdcard** to select a local PDF file from your device's SD card.
 - Tap **Dropbox** to select a PDF file from your Dropbox files, if applicable.
 - Tap **SkyDrive** to select a PDF file from your SkyDrive files, if applicable.
 - Share a photo.
 - a Tap **Select Picture from Gallery**.
 - b Select an image that you want to share.

To stop showing a content file during a call:

- » Tap .

Manage Contacts

After you register the RealPresence Mobile application to a provisioning server, you have access to LDAP service. With LDAP, you can call contacts in your corporate directory. You can also add, delete, or edit contacts in your local address book.

To add a contact from a corporate directory to your local address book:

- 1 Tap **Search**.
- 2 Enter the name or part of the name of the contact you want to find.
- 3 Tap the contact name from the search results.
- 4 Tap the device name of the contact, and then tap .
- 5 Tap .

To add contacts from recent calls list to your local address book:


- 1 Tap **RECENT CALLS**.
- 2 Tap next to the contact number you want to add.
- 3 Complete contact information and then tap .



Cannot add IP addresses to your address book

If the most recent call number is an IP address, you cannot add it to your local address book.

To add a new contact to your local address book manually:

- 1 Tap **CONTACTS**, and then tap .
- 2 Specify the contact information.
- 3 Only the display name is required. However, you must enter at least one of following before you can call this contact:
 - H.323 Extension
 - H.323 Name
 - SIP UR


The following table explains the contact information fields.

- 4 Save the information.

Contact Information

Fields	Descriptions
Display Name	Name you use to identify the contact. The display name appears only on your screen, so it can be any name that is meaningful to you.
Title	Contact's job title.
Phone	Contact's phone number.
E-mail	Contact's e-mail address.
Location	Contact's location.
Device Name	Name or type of system.
H.323 Extension	Number that gatekeepers use to identify this system. Your organization's dialing plan may define the numbers you can use.
H.323 Name	Name that gatekeepers use to identify this system. Your organization's dialing plan may define the names you can use.
SIP URI	SIP URI of the system.

To edit a contact in your local address book:


- 1 Tap **CONTACTS**.
- 2 Tap the contact number you want to edit.
- 3 Tap **Edit** from **Settings**.
- 4 Edit the contact information, and then tap .



Re-adding a contact from another directory

If you re-add a contact from your corporate directory to your local address book, your edits will be lost.

To delete a contact from your local address book:

- 1 Tap **CONTACTS**.
- 2 Tap the contact number you want to delete.
- 3 Tap , and then tap **Yes**.


To locate a contact quickly:

- » Tap a letter to view names that start with that letter.

Manage Cameras

The RealPresence Mobile application also allows you to switch cameras and switch among windows during a call.

To switch cameras:

- » While viewing your local video, tap  to switch between your front and rear cameras.

To switch among windows:

- » To switch among local, people, and content windows, swipe left or right.



Maximized content and window switching

When the content is maximized, you cannot switch windows.



Use Far End Camera Control (FECC)

In calls that support FECC, you can adjust the far-end camera to give you a better view.

To use FECC:

- » Tap .

To zoom the far-end camera:

- 1 Pinch the screen to zoom in and zoom out.
- 2 Tap  to zoom in or  to zoom out.

To navigate the far-end camera:

- » Use the arrow keys on the screen to navigate the far-end camera.


Attend a CloudAXIS Meeting

You can attend a CloudAXIS meeting via RealPresence Mobile. RealPresence Mobile also supports CloudAXIS HTTPS tunneling for unregistered SIP AVC calls, which allows you to join a CloudAXIS meeting with limited Internet access through an HTTPS tunneling mechanism. If you are invited to a CloudAXIS meeting, you will receive a meeting invitation via e-mail.

To attend a CloudAXIS meeting:

- 1 Open the meeting invitation e-mail.
- 2 Open the web URI by clicking the link.
- 3 Enter your e-mail address and your name to sign into CloudAXIS.
- 4 After you sign in, tap the Polycom® RealPresence® Mobile logo to launch the application. You will be in the meeting after Polycom® RealPresence® Mobile starts.

If you have not installed Polycom® RealPresence® Mobile, CloudAXIS will remind you to install Polycom® RealPresence® Mobile.

In the meeting, you can view the participant list by tapping  on the in-call tool bar.

Troubleshooting

The following table lists the problems that you might encounter and the possible solutions.

Solving Problems

Problem	Description and Solution
Video quality is poor.	Try the call again using a lower call rate. See About the RealPresence Mobile Application . You can also set up a private wireless network with a private key for the RealPresence Mobile application: <ol style="list-style-type: none">1 From the Applications list, tap Settings > WLAN.2 Choose your private wireless network.3 Enter your user name and password, and tap Join.
Video is not available.	Ensure that you are connected to a mobile network and registered to a provisioning server. Then try the call again.
Audio is noisy in calls from one device to another.	If the two devices are near to each other, mute the audio of one of them.
Cannot see the content shared by the far end.	Make sure that your RealPresence Mobile software version supports using a provisioning service and that you are registered with a provisioning server.

Solving Problems

Problem	Description and Solution
Unable to place a call.	Do one of the following: <ul style="list-style-type: none">• Check whether your WLAN connection is lost. If so, turn off the WLAN, and then turn it on again.• Wait 3 minutes or longer, and then turn off the gatekeeper or SIP registration. Then turn it on again.• Check whether your far end has a connection problem.
Registration fails.	Do one of the following: <ul style="list-style-type: none">• Check to be sure your WLAN is connected. If the connection has been lost, turn off the WLAN, and then turn it on again.• Wait for at least 3 minutes. Turn off the gatekeeper or SIP registration and then turn it on again.• Change the H.323 name and H.323 extension and then register again.• Force close the AT&T Business Video application and then try again.• If the registration fails when you are signed into a provisioning server, sign out and then sign in again.
Cannot sign into the provisioning server.	Do one of the following: <ul style="list-style-type: none">• Make sure the provisioning server address is correct. The DNS server may be unable to resolve your domain name. Contact your network administrator for help.• Check your network connection.
SmartPairing detection issues	<ul style="list-style-type: none">• If no room system is detected, ensure that SmartPairing and Telnet are enabled on the Group Series and HDX system. You can use the Telnet command <code>systemsetting uspairingenabled <Disabled Manual Auto></code> to configure SmartPairing on a Polycom HDX or RealPresence Group Series system first. For more information, contact your HDX or RealPresence Group Series system administrator.• When there are several HDX or RealPresence Group Series systems nearby that are all configured to support ultrasound-based auto detection, your Polycom® RealPresence® Mobile application may fail to detect them all, or may return incorrect IP addresses. In this case, you need to enter the IP address manually.• If you set the ultrasound as manual mode and set a password for remote access on HDX, Polycom® RealPresence® Mobile cannot pair with this HDX.